


CARDIFACILE



The new CARDI easy release device for bits. Universal use with 1"1/4 UNC standard bits.

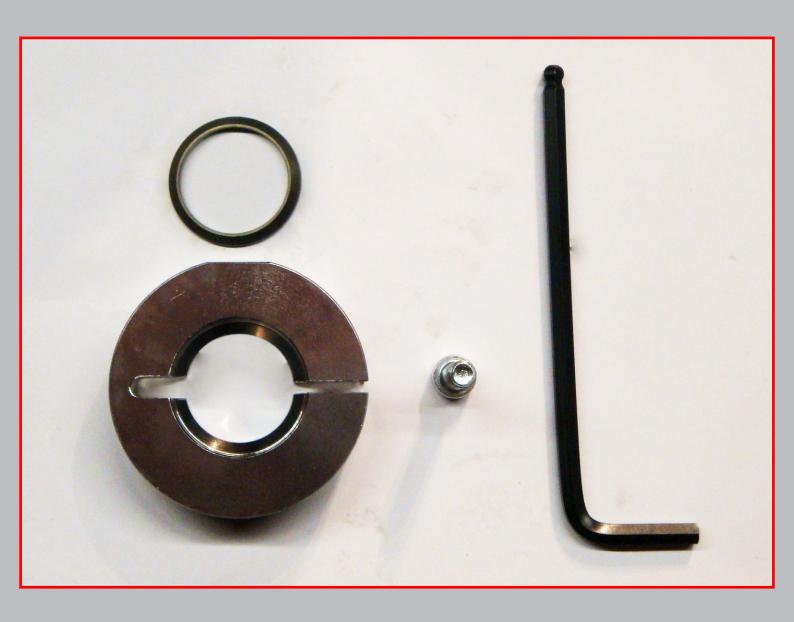

CARDIFACILE

USE INSTRUCTIONS



Remove dust from the shaft and clean it perfectly.





Put the inner ring on the core drill motor shaft. Be carefull that you mount it on the right way: the plain side of the inner ring must be complanar to the plain part of the shaft (see the picture);



Mount CARDIFACILE on the shaft;



Push CARDIFACILE on the shaft:



Screw the CARDIFACILE screw with the allen key;

Now you're ready to drill.

When you finish your drilling job, you must simply unscrew a little the CARDIFACILE screw and you'll can remove the bit easily.